

Kodiak™ by AeroMed™

Residential Filtration System



General Overview

Kodiak™ is a high efficiency filtration system designed for use in residential and light commercial forced air systems. The system can mate to up flow, down flow, and low boy furnace configurations.

The filter cartridge used in the Kodiak™ is effective for removing pollen, animal dander, dust, lint, mold, mites, and other commonly occurring household particulate contaminants.

The housing is easily connected to existing ductwork and provides convenient side access to the filter compartment. The filter is sealed within the compartment in order to help prevent bypass of contaminants around the filter. The filter access door can be opened without the use of tools.



Performance

Kodiak™ uses extended media filters to prolong filter life and decrease resistance to air flow. The unit is available with either a MERV 8 or MERV 11 filter for the best in filter efficiency.

“Kodiak, anything less is just another bear!”



Specifications

Dimensions:


21”H x 25”W x 7”D

Cabinet:

16 gauge gavanaal

Door:

Powder coat painted, 16 gauge gavanaal

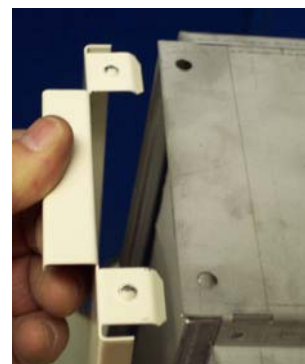

182 Division Street * PO Box 383 * Amsterdam, NY 12010

Phone: 1-518-843-3500 Fax: 518-843-8500

www.myAeroMed.com

